

Model 0393-(n)*



EZ FILL™ FOAM SOAP DISPENSER

AUTOMATIC DECK MOUNTED
FOAM SOAP DISPENSER FOR
EZFILL™ TOP FILL MULTIFEED
KIT WITH 1.6 GAL. (6L)
CONTAINER

INSTALLATION AND MAINTENANCE GUIDE

- 2 SUFFIX CODE INDEX AND APPLICATION
- 3 PRE-INSTALLATION INFORMATION
- 4 PACK CONTENTS
- 5 TECHNICAL DATA
- 6-7 INSTALLATION
- 7-8 CONNECTING THE POWER SOURCE
- 8 PRIMING THE SOAP DISPENSER
- 9 BATTERY REPLACEMENT INSTRUCTIONS
- 9 MAINTENANCE
- 10 TROUBLESHOOTING
- 11 SPARE PARTS LIST
- 12 WARRANTY
- 13-14 EZ FILL™ REMOTE CONTROL

Unit Install Date _____

Unit Location in Facility _____

Unit S/N (From Label) _____

Supplied By _____

Original PO No. _____

ASI Order No. _____

| Schedule of Model N° Suffix Codes to replace (n) in Model N° and Application | |
|--|--|
| Model N° Suffix | Service Application |
| 1A | Universal Model, Battery Operation |
| 1AC | USA/UK/EU Interchangeable Plug Model, AC Adapter Operation |
| 3AC | AU Model, AC Adapter Operation |
| 6-1A | Universal Model, Battery Operation, Six Pack |
| 6-1AC | USA/UK/EU Interchangeable Plug Model, AC Adapter Operation, Six Pack |
| 6-3AC | AU Model, AC Adapter Operation, Six Pack |

Space Provided For Owner Notes

PRE-INSTALLATION INFORMATION

CHECK CONTENTS


Separate all parts from the packaging and check each part with the PACK CONTENTS section. Make sure all parts are received and separated before discarding any packaging material. If any parts are missing, do not attempt to install the system until you obtain the missing parts.

IMPORTANT

Ensure there is adequate space and clearance under the vanity to accommodate the SD Mounting Shank and Basin Nut in the desired location before drilling the hole in the counter top.

Ensure there is adequate space to place the pump and compressor within reach of the Com Cable from the SD Shank.

Keep in mind that the location of the user hands, while using the faucet nearby, should not interfere with the soap dispenser sensor detection area.

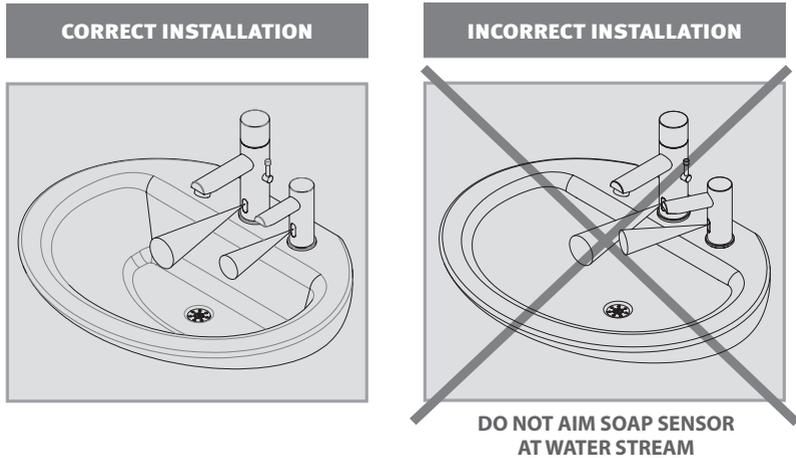

CAUTION

Do not install the soap dispensers facing a mirror or any other electronic system operated by an infrared sensor.

To prevent reflection problems, it is recommended to keep a 5' (1.50 M) minimum distance between the foam soap dispenser sensor and any other directly facing objects and 6" (150 mm) between the foam dispenser and the adjacent faucet.

PACK CONTENTS


EZFILL™ SOAP DISPENSER 0393-(n)

Identify the items and confirm that parts are included.


Automatic Foam SD Body and vanity mounting hardware with power cord, Com Cable w/inline plug connector and foam soap supply tube.

Foam Compressor with straight foam tube connector, L-connector and soap delivery tube, Com Cable with inline socket connector for dispenser head, Com Cable with inline plug connector for pump.

EZFILL™ pump assembly with support wall bracket, Com Cable w/inline socket connector, soap supply tube and mounting hardware.

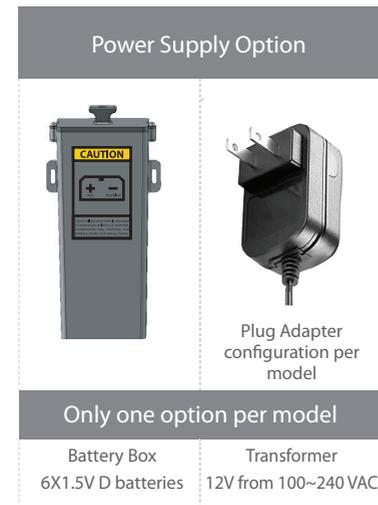


Batteries not included

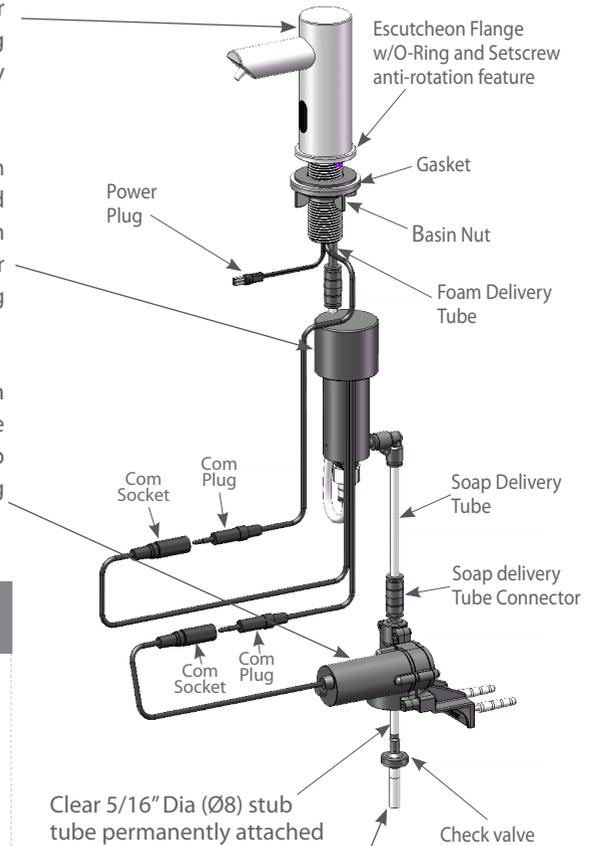

Clear 5/16" Dia (Ø8) stub tube permanently attached to pump housing, into which check valve is inserted. {IMPORTANT: Note flow direction}

Clear 5/16" dia. (Ø8) Soap Supply tube 118" (3000) supplied coiled and permanently attached to check valve.

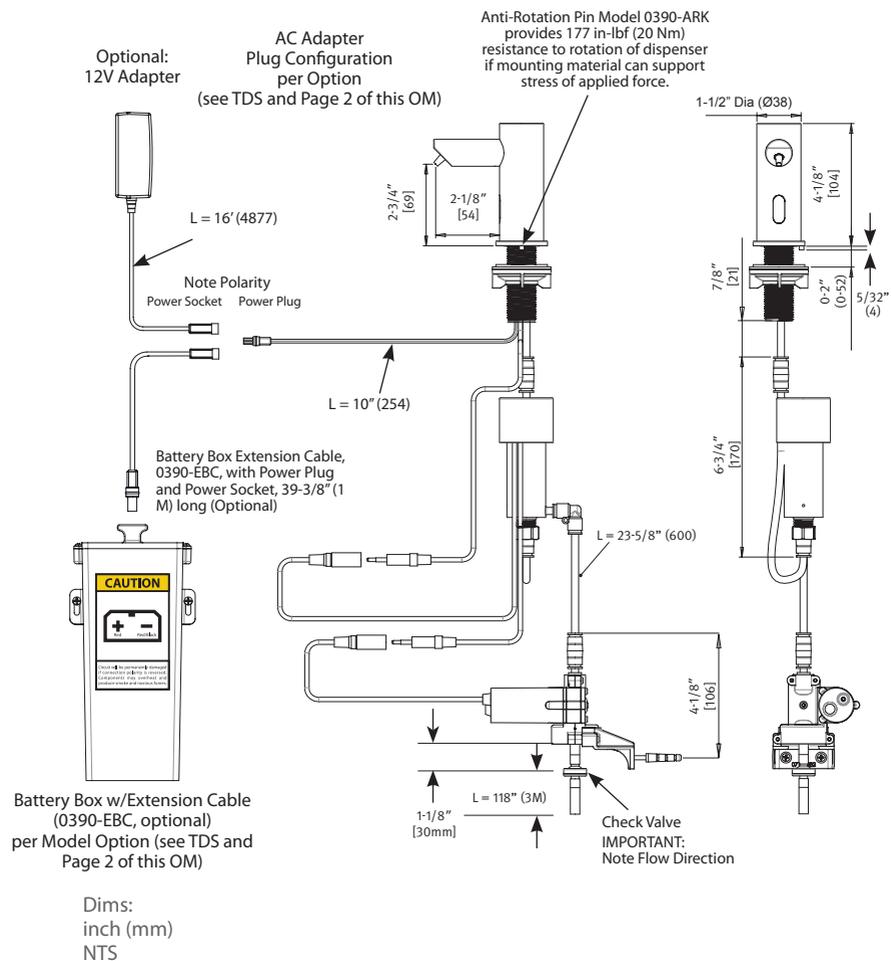

Model 0393-(n) EZFILL™ Foam Soap Dispenser and Soap Pump for Multifeed System

| Soap Viscosity | Soap pH | Soap Type |
|---------------------|-----------|------------------------------------|
| Max 100 cPs (mPa·s) | 5.5 – 8.5 | Clear foaming liquid, no abrasives |

INSTALLING THE EZFILL™ FOAM DISPENSING SYSTEM SOAP DISPENSER

- Drill a 1" Dia [Ø25] hole through the counter top at the designated location for the dispenser body. Drill 5/32" Dia (Ø4) x 3/16" (5) deep hole for the anti-rotation pin.

Remove and retain the basin nut and gasket from the base of the soap dispenser body, sliding completely over and off the soap tube, Com and Power Cables.
- Place the soap dispenser shank through the escutcheon flange (with O-ring down) into the hole in the counter top.

Be careful to locate the anti-rotation pin into pre-drilled hole so that alignment is permanently fixed. Slide the metal washer, rubber disk, then nut over the black soap tube and both cables and thread onto the shank and secure it to deck underside.
- Connect the foam compressor to the tube extending down from the shank by pushing the straight connector up onto the tube until fully engaged.

IMPORTANT: the foam dispenser compressor **MUST** be installed as shown in the picture. This position prevents dirt and debris buildup. Insert the dispenser head Com Plug into the compressor Com Socket. Please note that since the connector is water proof, some pressure must be applied for a perfect seal.
- Fix the pump to the desired location by securing the support with the supplied screws. Ensure the pump is within plug-in range of the Com cable plug and the Soap Delivery Tube from the L-Connector on the Compressor.
- Connect the black soap delivery tube from the compressor to the soap pump via the soap delivery tube connector.

The delivery tube can be cut in the field to suit under-counter space conditions

INSTALLATION

INSTALLING THE EZFILL™ FOAM DISPENSING SYSTEM SOAP DISPENSER

6


Cut the 5/16" dia (Ø8) soap supply clear tube coming from the EZFILL™ Pump-Motor to the right length as required by the installation.



Make sure the end of the tubes are about 1" (25) longer than required to reach the tank bottom.

7

Connect the EZFill™ Pump-Motor clear 5/16" dia. (Ø8) soap supply tube to any available locking bushing in the soap tank cap (see 0390 OM & IG).

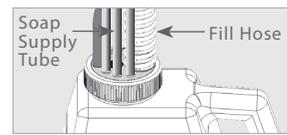

NOTE: The Multifeed Kit enables soap distribution for up to six (6) soap dispensers simultaneously. When installing less than a full complement of soap dispensers, make sure to insert and clamp the 5/16" dia x 1" long (Ø8x25) plugs into the remaining empty holes.

CONNECTING THE POWER SOURCE

8

Remove the protective sticker covering the sensor. Keep objects away from the sensor range to avoid inadvertent triggering of the unit during installation.




Connect the Com Cable pump connector to the mating plug extending from the compressor. Please note that since the connector is waterproof, some pressure must be applied for a perfect seal. See also Step 5 [above].

9

IMPORTANT: the 4 contacts connector should be inserted fully so that the white O-ring is not visible and a clicking sound is heard when fully engaged.



NOTICE: If the 4 contacts connectors are not connected properly, the motor will run continuously.

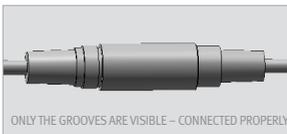


INSTALLATION

CONNECTING THE POWER SOURCE

10

A. For battery versions: Insert six (6) 'D'-size alkaline batteries into the battery box. Be sure to observe polarity configuration. Install the battery box at the wall underneath the sink and connect the battery connector. More freedom may be obtained with use of Optional 0390-EBC extension cable. Ensure adequate clearance to allow removal of the top cover and the battery carrier tray when a battery change is required.

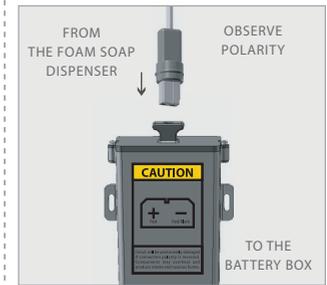


B. For AC Adapter versions: plug the adapter into the power socket and connect the adapter DC connector to the power plug from the soap dispenser.



PRIMING THE SOAP DISPENSER

Option 1


Once the Multi Feed tank is filled with soap, press and hold the fill button located on the EZFILL™ foam soap dispenser pump until soap is observed dispensing from spout. Release button to stop priming.

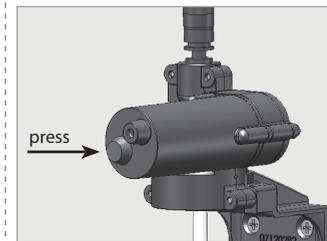

Option 2

Optionally, press (once) the fill function on the soap dispenser remote control while pointing at the blue LED in the sensor. Priming will last 1 minute. Press the fill button (once) again if no soap comes out after the time limit is over. Press "FILL" button again to stop if foam is dispensing before prime time-out.

See SETTINGS ADJUSTMENT in 0393-R operation manual for additional functions (Pages 13-14).

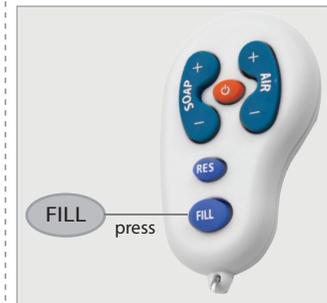

BATTERY REPLACEMENT INFORMATION

Battery models only

To replace the batteries:

1. Carefully open the battery box, use Philips drive #2 to remove cover screws (Fig. 1&2, below)
2. Remove the old batteries from carrier tray (Fig. 3)
3. Replace the used batteries with new D-size batteries in same polarity Fig. 3)

NOTE: Do not mix used batteries with new ones. Do not use rechargeable batteries.

4. Close the box, re-tighten the screws (Fig. 4) and reconnect battery cable.



Important: spent batteries should be recycled as industrial waste. Contact your local authority for information on waste disposal and recycling.



MAINTENANCE

Care and cleaning of chrome and special finishes- see also PCM document.

DO NOT use steel wool or cleansing agents containing alcohol, acid, abrasives, or the like. Use of any cleaning or maintenance products containing these substances could damage the surface of the soap dispenser. For surface cleaning use **ONLY** soap and water, then wipe dry with a clean cloth or towel. When cleaning bathroom tiles or counters, protect the soap dispenser from any splattering of harsh cleansers.

Filter cleaning instructions:

The foam soap dispenser's compressor is provided with a filter. It is recommended to clean the filter every six (6) months.

A decrease in soap supply may indicate that the the filter is clogged and requires cleaning. Cleaning instructions:

1. Disconnect the compressor from the soap dispenser body
2. Unscrew the nut at the bottom of the foam compressor and pull out the filter.
3. Wash the filter under running water.
4. Reassemble the parts.

MAKE SURE THE SOAP CONTAINER IS CLEAN BEFORE FILLING IT WITH SOAP. DIRTY SOAP MAY CAUSE CLOGGING.

TROUBLESHOOTING

| PROBLEM | INDICATOR | CAUSE | SOLUTION |
|--|---|--|--|
| Foam does not come out of the spout | Blue light in the sensor flashes (once) and the motor is operating. | Soap has run low or completely out. | Priming the soap dispenser <i>Refer to page 8</i> |
| | | The soap tank has been filled but soap has not reached the spout. | Press the refill button located on the soap dispenser pump or on the FILL button on the remote until soap starts to come out of the spout. |
| | | The connectors between foam dispenser head dispenser pump, compressor unit and the foam dispenser head unit are not connected properly. | Connect the inline Com Cable connectors properly so that the white o-ring is not visible. |
| | | The filter is clogged. | Clean or replace the compressor filter. |
| | Blue light in the sensor does not flash (once) when the user's hands are within the sensor's range. | Sensor is picking up reflections from the washbasin or another object. | Eliminate cause of reflection. |
| | | Connectors between the foam dispenser head unit and power source are disconnected or not properly connected. | Connect the foam dispenser head power connector to the power source connector. |
| Foam is too diluted | | Air ratio too low | Increase air ratio using the remote control. (sold separately) <i>Refer to page 14</i> |
| Foam is too dense | | Air ratio too high | Decrease air ratio using the remote control. (sold separately) <i>Refer to page 14</i> |
| Soap dispenser pump does not work | Blue light flashes (once) and the foam compressor operates. | The connectors between the soap dispenser pump and the foam compressor are not connected properly. | Connect the inline Com Cable connectors properly so that the white O-rings are not visible. |
| Soap compressor does not work | Blue light flashes (once) and the motor operates. | The connectors between the compressor and the electronic unit are not connected properly. | |
| Soap coming out of the spout does not stop | | The connectors between the motor and the compressor are not connected properly. The connectors between the compressor and the electronic unit are not connected properly. | |
| Pump runs but does not prime | No foam from Compressor | Check Valve clogged | Replace or clean Check Valve |

SPARE PARTS LIST

| | |
|---|------------|
| EZFILL™ Multi Feed Kit W/5 Liter Container | 0390 |
| EZFILL™ AC Adapter 12V (US, UK, & EU) | 0390-ACA |
| EZFILL™ AC Adapter 12V (AU) | 0390-ACA-3 |
| EZFILL™ Anti-Rotation Kit..... | 0390-ARK |
| EZFILL™ Battery Pack (Batteries not included) | 0390-BP |
| Mounting Bracket for EZFILL™ Multi Feed Tank | 0390-BR |
| EZFILL™ Battery Pack (0390-BP) Extension Cable/1M Male to Female Connectors | 0390-EBC |
| EZFILL™ Soap Pump | 0390-P |
| Mounting Bracket for EZFILL™ Soap Pump only | 0390-PBR |
| EZFILL™ 180° Quick Connector | 0390-QC |
| EZFILL™ 6 Liter Container Only | 0390-SCON |
| EZFILL™ Soap Supply Tubing 5/16" OD (Ø8) x 118" [3M] | 0390-ST |
| EZFILL™ Disc Cover for Top Fill Port | 0390-TMC |
| EZFILL™ Air Compressor..... | 0393-C |
| EZFILL™ Check Valve | 0393-CV |
| EZFILL™ Filter for Air Compressor | 0393-F |
| EZFILL™ 90° Quick Connector and ¼" Dia. [Ø6 mm] Plastic Pipe 24" [610 mm] long | 0393-QC |
| EZFILL™ Remote for Foam Dispensers | 0393-R |

WARRANTY

We are pleased to offer this warranty covering ASI products furnished for your project.

This warranty replaces any other warranties or product descriptions, whether expressed or implied, written or oral.

It is understood that the products for this project have been selected and inspected by the purchaser, and have been accepted without qualification by the purchaser as merchantable, fit for the intended use, and satisfy the specifications.

EZ FILL™ SOAP DISPENSER WILL BE FREE OF DEFECTS IN MATERIAL AND WORKMANSHIP DURING NORMAL USE FOR (2) TWO YEARS FROM THE DATE OF INVOICE.

Should the product fail under this warranty, the sole remedy, at the seller's option, will be to repair the defective product, refund the purchase price, provide an equivalent new or refurbished product or provide parts only.

ASI AND/OR SELLER DISCLAIM ANY LIABILITY FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. This warranty excludes product damage due to incorrect installation, improper maintenance, wear and tear, battery spoilage, product abuse, or product misuse, whether performed by a contractor, service company, or the consumer.

ASI will not be responsible for labor costs associated with the removal, replacement, repair by others, reinstallation, renovation or return of its products.



EZFILL™ FOAM REMOTE CONTROL

REMOTE CONTROL FOR ALL MODELS
0393-(n) and 0394-(n) Vanity Mounted
Automatic Foam Soap Dispensers

FUNCTIONAL & OPERATIONAL GUIDE

OPERATION

If desired, use the remote control to adjust the foam soap dispenser settings. Hold the remote control straight in front of the sensor in a distance of about 4-6" (10-15cm).

Attention: Holding the soap dispenser remote control out of the recommended range (too close or too far) may interfere with it's activation.

1-SOAP VOLUME

Press the + sign at the SOAP button to increase the soap volume by increasing the dispensing time and the - sign to decrease it. Adjustable foam dispensing duration (min-max): 0.5-2.5 seconds
Indication: continuous blinking blue light in the sensor eye.

2-SOAP CONSISTENCY

To improve the soap "foamability" change the amount of air to be mixed. Press the + sign on the AIR button to increase the air mixed with the soap and the - sign to decrease it.
Indication: 2 blinks of the blue light in the sensor eye.

3-RES

This function resets the sensor back to factory settings: soap volume, soap consistency (foamability), soap tank refill, temporary off and reset.

4-TEMPORARY OFF FUNCTION


This function temporarily disables the dispenser and is ideal to perform any kind of activity in front of the sensor without operating the system (for example, cleaning). The soap dispenser will remain shut off for one minute when this button is pressed once. To cancel this function and to return to normal operation press the On/Off button again or wait one minute.

5-FILL THE SOAP TANK

Once the soap tank has been filled/refilled, press the FILL button. The pump will work for one minute in order to fill the piping with soap. To stop this activity press the FILL button again.

If the soap has not started coming out of the spout, after 1 minute of priming press the FILL button again.

Indication: continuous blue light in the sensor eye.

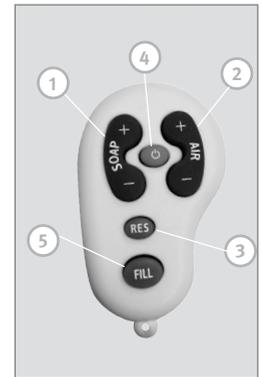

Remote control battery

The remote control is powered by a CR2032 battery, with a life span of 4 years.

Replacing the battery:

1. Remove the metal key ring using small pliers
2. Separate the two parts of the plastic cover. note the two plastic pins which connect the two cover parts
3. Gently push the old battery out of its support and replace it with a new one
4. Reassemble the remote

